


hanatek

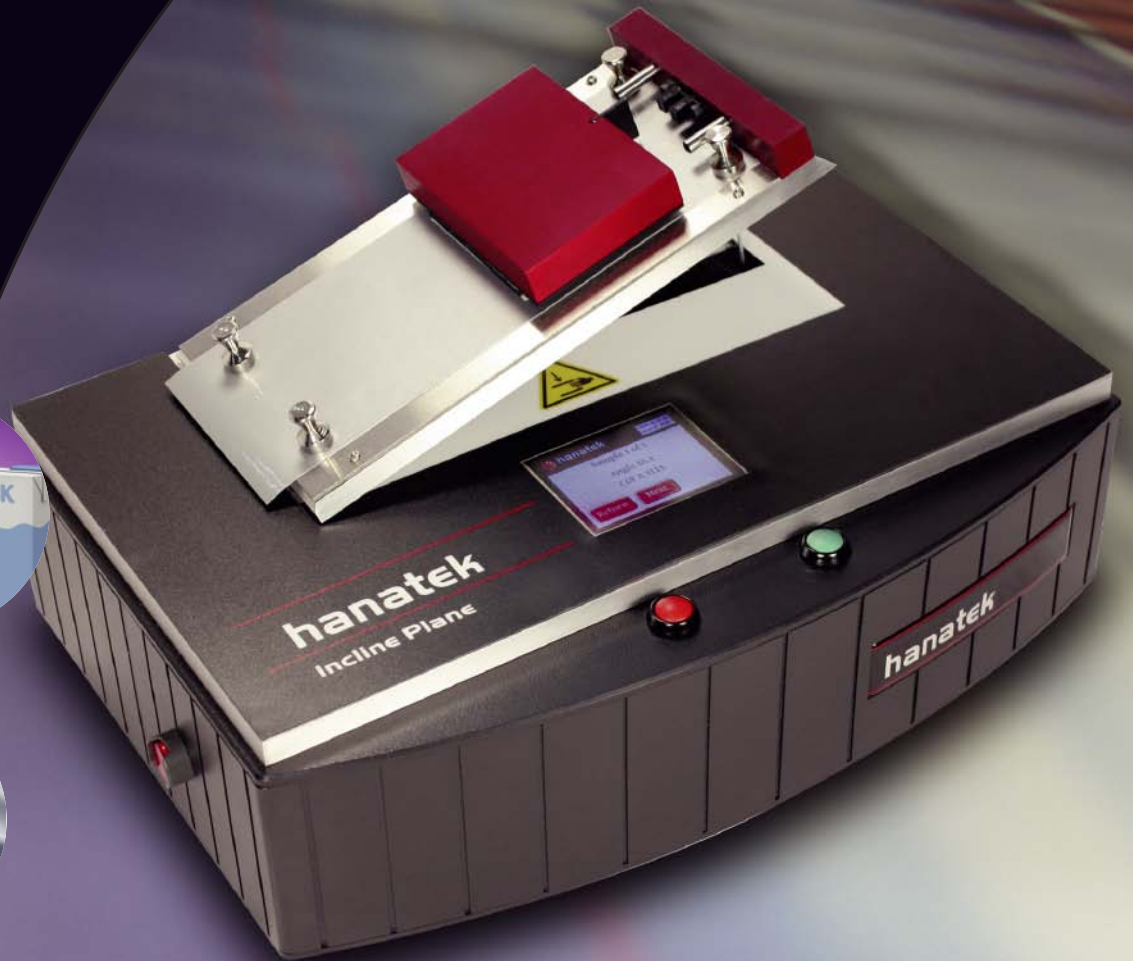

www.hanatekinstruments.com

IPT Inclined Plane Friction Tester

- Measure static coefficient of friction
- Measure slip angle

Hanatek products are exclusively
manufactured and distributed by




IPT Inclined Plane Friction Tester

ANALYSE SURFACE FRICTION CHARACTERISTICS

The Hanatek Inclined Plane Tester is a low cost but accurate instrument for determining the static friction coefficient of flat surfaces.

Static friction describes the force required to move two stationary surfaces against one another.

Quantifying static friction is helpful in understanding how objects will behave during transportation or during feeding into an automated process.

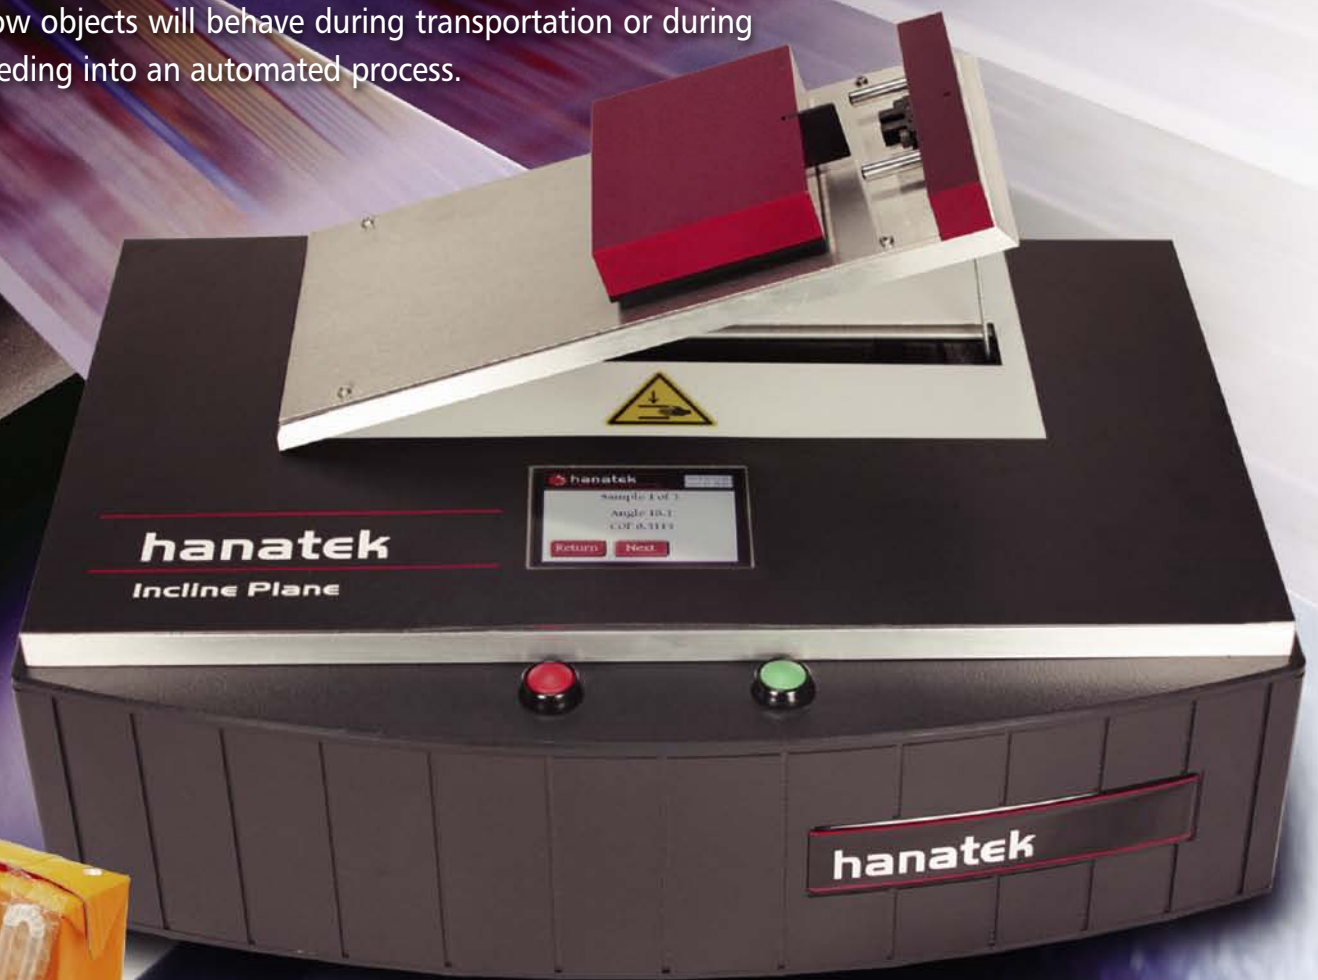

To understand how moving objects will behave during an automated process it is important to also quantify dynamic friction. This can be measured using the Hanatek Advanced Friction Tester.

ANALYSE SURFACE FRICTION CHARACTERISTICS

FEATURES

Automated calculation of results

Test results are reported instantly in both COF and slip angle, completely eliminating the errors associated with manually operated instruments.

Statistical analysis of results

On-board statistical analysis for an instant indication of batch quality.

Simplicity of reporting

Date and time stamped results can be printed to the optional Hanatek results printer for simple reporting on job sheets or keeping with retained samples.

Auto sample detect

Tests cannot start without the sample being positioned correctly.

Touch screen operation



APPLICATIONS




Printed carton board



Unprinted carton board



Corrugated board

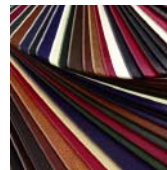

Leather



Textile



Non Wovens

WARRANTY

FREE EXTENDED WARRANTY

Two year comprehensive guarantee as standard.


IPT Inclined Plane Friction Tester

IPT SPECIFICATIONS

Standards	TAPPI T815, ASTM D4981	
	Angle	Static COF
Range	0° – 52°	0 – 1.3
Resolution	0.1°	0.002 Static COF
Repeatability	0.4°	0.01 Static COF
Sled Weight	200g	
Power	AC 110V/220V 50Hz/60Hz	
Net weight	4kg	
Gross weight	5kg	
Dimensions	(h) 180 x (w) 225 x (l) 300 mm	
Packed weight	8kg	
Commodity code	9024 8011	

OPTIONAL ACCESSORIES

Results printer

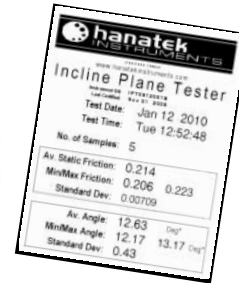

INCLUDED ACCESSORIES

- 200g Sled
- Sample securing magnets



Certificate No. FM29741
ISO: 9001-2008

LOCAL AGENT



hanatek

12 Beeching Road | Bexhill-on-Sea | East Sussex | TN39 3LG | UK
Tel: +44 (0) 1424 739623 | Fax: +44 (0) 1424 730600
sales@hanatekinstruments.com | www.hanatekinstruments.com